

Ea Nanofiber Filter Cleaning Procedure



Figure 1

Ea filters should be cleaned every year or 25,000 miles, whichever comes first. Carefully remove the filter from the housing.



Figure 2

Clean the housing with a shop towel, being careful not to knock contaminants into the air inlet.



Figure 3

Gently tap the top of the filter with your hand to further loosen larger debris from the filter element.



Figure 4

Filters can be cleaned by carefully vacuuming the filter media on the dirty side.



Figure 5

Alternate Cleaning procedure using an air compressor: Set the in-line air pressure to between 15 and 20 psi



Figure 6

holding the filter with one hand, carefully blow the filter media at a 45 degree angle on the clean side using the low-pressure shop air

Service Life

Injen / AMSOIL Ea Air Filters are guaranteed for four years or 100,000 miles, whichever comes first. The guarantee applies only if the filter has been serviced according to Injen / AMSOIL recommendations. In off-road, frequently dusty or other severe duty applications, clean and change more often as determined by operating conditions or as indicated by restriction gauge.